






 










 






SIMBOL UZUAL	DESCRIPTION	
	PICTURE MODE	režim slike
	SOUND MODE	režim zvuka
	STILL	slika bez pokreta
	P.SIZE	veličina slike
	TEXT REMARK	napomena
	ENTER	unos
	STATUS	status
	EXIT	izlaz
	MENU	meni
	SWITCH TV VIDEO	zameniti tv/video
	SEARCH	pretraga
	TIME PAGE	podešavanja sata
TV 	TV MODE	TV režim
	EYE (SRS)	podešavanja zvuka
	VOLUM	jačina zvuka
	NEXT PREVIOUS PAGE	sledeća/prethodna strana
	INDEX	indeks
	CANCEL	poništiti
	HOLD	opozvati
	DISPLAY	prikaz
	DUAL	dvostruko
	REVEAL	otkriti
	TELETEXT	teletekst
	TTX/MIX	teletekst/miks
	ENLARGE	povećati
	POWER	pokretanje
	SLEEP	mirovanje
	PIP	slika u slici
	TURBO	turbo