

Send Motion Record to FTP

IPC88 Series

1. Enable FTP function

Device config

Setting -> System -> NetService

- IP FILTER
- DDNS
- EMAIL
- NTP
- PPPoE
- ARSP
- Mobile Monitor
- UPNP
- FTP**
- WiFi
- Alarm Server
- RTSP
- DAS

FTP

Enable ☒

Server Address

Port

User Name

Password ☒ Anonymous

File Length M

DirName

2. Enable motion function

Setting -> Alarm -> Video Motion



Device config

Setting -> Alarm -> Video Motion

Channel 1

Enable ☒

Sensitivity Middle

Region Setting

Period Setting

Interval 1 Sec

Alarm Output 1

Delay 10 Sec

Record Channel 1

Tour 1

Snapshot 1

PTZ Activation Setting

Delay 10 Sec

☐ Show Message

☐ Send Email

☐ Buzzer

☒ FTP

Copy

Paste

Refresh

OK

Cancel

3. Setup record schedule

