



## instruction manual

eredeti használati utasítás  
návod na použitie  
manual de utilizare  
uputstvo za upotrebu  
navodilo za uporabo  
návod k použití

DL 90

home  
by somogyi

## LED disco light

## TROUBLESHOOTING

If the brightness decreases and/or the rotation speed slows, replace the batteries!

Before using the product for the first time, please read the instructions for use below and retain them for later reference. The original instructions were written in the Hungarian language. This appliance may only be used by persons with impaired physical, sensory or mental capabilities, or lacking in experience or knowledge, as well as children from the age of 8, if they are under supervision or have been given instruction concerning use of the appliance by a person responsible for their safety and they have understood the hazards associated with use. Children should not be allowed to play with the unit. Children may only clean or perform user maintenance on the appliance under supervision.

The disco light is can be used excellently for house parties, and parties to enhance the mood. After turning it on, it projects continuously moving colorful light dots on the walls and ceiling. Visibility is greatly dependent on the lighting conditions of the room. The product is designed as hobby product for home use, it is not a professional device.

- Rotating, shining crystal ball • Continuously changing symbol projection • Ideal for bigger rooms • Power saving, safe LED technology • 3 pcs of colorful inbuilt LED (blue-green-red) • Power supply 3xAA(1,5V) batteries, not included

## STARTUP, TURNING IT ON

Use a screwdriver remove the lid of the battery compartment. According to the marked polarity insert in 3 pcs of AA sized 1,5 Volt alkaline batteries. Screw the lid of the battery compartment back. Place the appliance on a safe, stable, flat place, then make sure, the device and its parts are not damaged. Turn it on (I) with the toggle button (I/O) located on its side. The lighting works, the rotation starts. The projection is best seen in the dark, from a distance of 3-5 meters. Replacing the battery can only be done by an adult! • Do not use together batteries from different manufacturer, or different charge state! • If the batteries are depleted, or the appliance is not in use for a longer period, immediately remove the batteries! If liquid has leaked from them, wear a protective glove, and with a dry cloth clean the battery chamber! • Do not open the batteries, throw them into fire, or short circuit them! • Do not charge not rechargeable batteries! Explosion hazard! • Do not place secondary batteries instead of batteries into the product, because their voltage and performance is significantly lower! • In the cold the performance of the batteries weaken, more frequent battery replacement may be necessary!

## CLEANING

Before cleaning turn the appliance off. Use a soft, dry cloth. Do not use aggressive cleaners and liquids!

## LED disco light

If it does not lights, check the position of the toggle switch, and the proper placement of the batteries and their condition! In case of any other problem contact a service center!

## WARNINGS

- Please before use read this instruction manual carefully, and place it in an easily accessible place for future reference!
- The luminaire should only be lifted by its base!
- This product is not suitable for illuminating domestic premises; can be used to produce light effects. The light sources in the luminaire are not replaceable!
- Do not look into the light of the LED, and do not direct it at reflective surfaces!
- Protect from dust, humidity, liquids, moisture, frost, and shock, as well as from direct heat and sunshine!
- Only usable indoors, under dry circumstances!
- Do not hinder the free rotation of the product, do not cover it!

• Do not let splashing water come into contact with the appliance, and do not place objects filled with liquid, e.g. a glass on the appliance!

• Open flame source, like a lit candle, cannot be placed on the appliance!

## •

## Do not

## dismantle,

## or

## modify

## the

## appliance,

## as

## cause

## fire,

## accident

## electric

## shock!

• Due to continuous improvements, the technical data and design may change without any prior notice.

## •

## The

## actual

## instruction

## manual

## can

## be

## downloaded

## from

## www.somogyi.hu

## website..

## • We

## don't

## take

## the

## responsibility

## for

## printing

## errors

## may

## occur,

## and

## apologize

## for

## them.



## LED diszkó lámpa

If the brightness decreases and/or the rotation speed slows, replace the batteries!

If it does not lights, check the position of the toggle switch, and the proper placement of the batteries and their condition!

In case of any other problem contact a service center!

## WARNINGS

- Please before use read this instruction manual carefully, and place it in an easily accessible place for future reference!
- The luminaire should only be lifted by its base!
- This product is not suitable for illuminating domestic premises; can be used to produce light effects. The light sources in the luminaire are not replaceable!
- Do not look into the light of the LED, and do not direct it at reflective surfaces!
- Protect from dust, humidity, liquids, moisture, frost, and shock, as well as from direct heat and sunshine!
- Only usable indoors, under dry circumstances!
- Do not hinder the free rotation of the product, do not cover it!

• Do not let splashing water come into contact with the appliance, and do not place objects filled with liquid, e.g. a glass on the appliance!

• Open flame source, like a lit candle, cannot be placed on the appliance!

## •

## Do not

## dismantle,

## or

## modify

## the

## appliance,

## as

## electric

## shock!

• Due to continuous improvements, the technical data and design may change without any prior notice.

## •

## The

## actual

## instruction

## manual

## can

## be

## downloaded

## from

## www.somogyi.hu

## website..

## • We

## don't

## take

## the

## responsibility

## for

## printing

## errors

## may

## occur,

## and

## apologize

## for

## them.



## LED diskotéková guľa

If the brightness decreases and/or the rotation speed slows, replace the batteries!

If it does not lights, check the position of the toggle switch, and the proper placement of the batteries and their condition!

In case of any other problem contact a service center!

## WARNINGS

- Please before use read this instruction manual carefully, and place it in an easily accessible place for future reference!
- The luminaire should only be lifted by its base!
- This product is not suitable for illuminating domestic premises; can be used to produce light effects. The light sources in the luminaire are not replaceable!
- Do not look into the light of the LED, and do not direct it at reflective surfaces!
- Protect from dust, humidity, liquids, moisture, frost, and shock, as well as from direct heat and sunshine!
- Only usable indoors, under dry circumstances!
- Do not hinder the free rotation of the product, do not cover it!

• Do not let splashing water come into contact with the appliance, and do not place objects filled with liquid, e.g. a glass on the appliance!

• Open flame source, like a lit candle, cannot be placed on the appliance!

## •

## Do not

## dismantle,

## or

## modify

## the

## appliance,

## as

## electric

## shock!

• Due to continuous improvements, the technical data and design may change without any prior notice.

## •

## The

## actual

## instruction

## manual

## can

## be

## downloaded

## from

## www.somogyi.hu

## website..

## • We

## don't

## take

## the

## responsibility

## for

## printing

## errors

## may

## occur,

## and

## apologize

## for

## them.



## LED diskotéková guľa

If the brightness decreases and/or the rotation speed slows, replace the batteries!

If it does not lights, check the position of the toggle switch, and the proper placement of the batteries and their condition!

In case of any other problem contact a service center!

## WARNINGS

- Please before use read this instruction manual carefully, and place it in an easily accessible place for future reference!
- The luminaire should only be lifted by its base!
- This product is not suitable for illuminating domestic premises; can be used to produce light effects. The light sources in the luminaire are not replaceable!
- Do not look into the light of the LED, and do not direct it at reflective surfaces!
- Protect from dust, humidity, liquids, moisture, frost, and shock, as well as from direct heat and sunshine!
- Only usable indoors, under dry circumstances!
- Do not hinder the free rotation of the product, do not cover it!

• Do not let splashing water come into contact with the appliance, and do not place objects filled with liquid, e.g. a glass on the appliance!

• Open flame source, like a lit candle, cannot be placed on the appliance!

## •

## Do not

## dismantle,

## or

## modify

## the

## appliance,

## as

## electric

## shock!

• Due to continuous improvements, the technical data and design may change without any prior notice.

## •

## The

## actual

## instruction

## manual

## can

## be

## downloaded

## from

## www.somogyi.hu

## website..

## • We

## don't

## take

## the

## responsibility

## for

## printing

## errors

## may

## occur,

## and

## apologize

## for

## them.



## LED diskotéková guľa

If the brightness decreases and/or the rotation speed slows, replace the batteries!

If it does not lights, check the position of the toggle switch, and the proper placement of the batteries and their condition!

In case of any other problem contact a service center!

## WARNINGS

- Please before use read this instruction manual carefully, and place it in an easily accessible place for future reference!
- The luminaire should only be lifted by its base!
- This product is not suitable for illuminating domestic premises; can be used to produce light effects. The light sources in the luminaire are not replaceable!
- Do not look into the light of the LED, and do not direct it at reflective surfaces!
- Protect from dust, humidity, liquids, moisture, frost, and shock, as well as from direct heat and sunshine!
- Only usable indoors, under dry circumstances!
- Do not hinder the free rotation of the product, do not cover it!

• Do not let splashing water come into contact with the appliance, and do not place objects filled with liquid, e.g. a glass on the appliance!

• Open flame source, like a lit candle, cannot be placed on the appliance!

## •

## Do not

## dismantle,

